

Technical Specifications
of
Dual Source kWh Energy Meter
(SPKG300)



Class 0.5S

Sai PowerrZerve
29/3B , Rajalakshmi Nagar, 1st Main Road,
Velachery Bye Pass, Chennai – 600 042.

Website : www.spowerz.com

Email : info@spowerz.com

Phone : 044- 43192660

General Specifications

1) GENERAL:

- Meter measures Active Power and Active energy on 3 phase 4 wire system,
- All four quadrant measurement for KWh are measured and stored in energy accumulators,
- Parameters can be viewed through 7 segment LED (3 row),
- Soft Keys are provided to stop, scroll, edit and to view the parame
- RTC with battery backup is used for time keeping and has a calendar of 100 years,
- Power Line Communication can be done using RS485 communication with MODBUS RTU,

2) METER FEATURES:

2.1) Display Details:

- 7 segment (3*4 digits) LED type – The parameters are calculated by the meter are displayed,
- Selectable Parameters – Can select any out of 8 parameters.
- Scroll rate – The scroll rate of the display parameter scroll in steps of 4secs.
- Keys are provided to stop, scroll, edit and to view the particular parameter.

2.1.1) Display Parameters:

- Time,
- Date,
- Meter ID with Phase Sequence,
- Frequency (Hz.),
- Instant Active Power – KW – R,Y,B,(EB/DG)
- Instant – KW – RYB. (EB/DG)
- Cumulative – RYB – Active Energy (KWh), (EB)
- Cumulative – RYB – Active Energy (KWh), (DG)

2.2) Key Features:

- The Parameter setup can be done through 4 nos. of soft keys on front fascia,
- Keys on the front panel is used to
 - ✓ scroll, increment, decrement through display parameter and
 - ✓ set the Meter ID,
 - ✓ CT Primary values,
 - ✓ Time & Date,
 - ✓ MD Reset (EB / DG),
 - ✓ Energy Reset(EB / DG),
 - ✓ Change Password.
- Press scroll key once the parameter set is completed, this allows to view the parameters one after the other automatically (change over time period is 4 secs). If this is not done auto scroll will not happen.

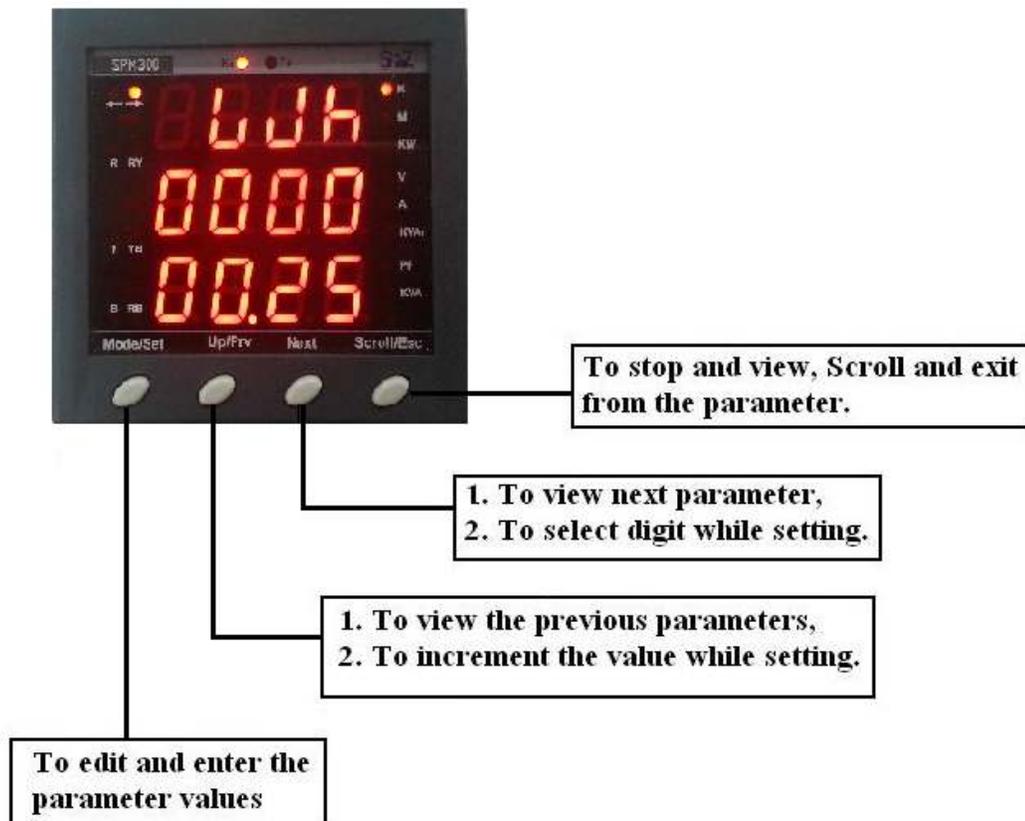


Fig.:- Key Feature Description

2.3) Rear Terminal Details:

S1 → S2		S1 → S2		S1 → S2		P/+	N/-
IR		IY		IB		AC 110-230V	DC 24-300V
Primary CT Programmable ___/1 or 5 A						DG Sense	
Manufactured by  Sai PowerZerve Chennai, India. www.spowerz.com							
Meter Name: Dual Source Energy Meter						Ver:	
Model:						Class: 0.51.0	
Serial No:							
Volt Input		LN: 0-300V AC LL : 0-600V AC		RS 485		Aux. Supply 85 - 265 VAC	
VR	VY	VB	VN	A	B	L	N

2.4) Communication:

2.4.1) Communication Interface:

- Through RS485 Communication with MODBUS RTU,
- Baud Rate : 9600
- Power Line Communication using Power Line Node and Concentrator.

Note:

- (i) Field Programmability of the meter is optional based on the customer requirement,
- (ii) Each meter is given a unique number at the factory.

2.5) Safety Precautions:

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- Only qualified electrical workers should install this equipment. Such work should be performed only after reading this entire set of instructions.
- If the equipment is not used in a manner specified by the manufacturer, the protection provided by the equipment may be impaired.
- NEVER work alone.
- Before performing visual inspections, tests, or maintenance on this equipment, disconnect all sources of electric power.
- Assume that all circuits are live until they have been completely de-energized, tested, and tagged.
- Pay particular attention to the design of the power system.
- Consider all sources of power, including the possibility of back feeding.
- Turn off all power supplying the dual energy meter and the equipment in which it is installed before working on it.
- Always use a properly rated voltage sensing device to confirm that all power is off.
- Before closing all covers and doors, inspect the work area for tools and objects that may have been left inside the equipment.
- When removing or installing panels do not allow them to extend into the energized bus.
- The successful operation of this equipment depends upon proper handling, installation, and operation.
- Neglecting fundamental installation requirements may lead to personal injury as well as damage to electrical equipment or other property.
- NEVER bypass external fusing.
- NEVER short the secondary of a PT.
- NEVER open circuit a CT
- High voltage testing may damage electronic components contained in the dual energy meter.
- Ensure that no wiring strands are straying outside after connecting the wires.
- Dual Source Energy Meter should be installed in a suitable electrical enclosure.

Failure to follow these instructions will result in death or serious injury

Technical Specifications

Accuracy	: Class 0.5S
System type	: 3 Phase 4 Wire
Resolution	: 0.01 (for Combined Kwh)
Display	: Multi Parameter LED (3 ROW)
Auxiliary Supply	: 85 – 265 VAC
Current CT	: Primary side – Programmable (5A – 6000A) : Secondary side – 1 or 5A
Starting Current	: 10mA
Power Factor	: 4 quadrant operation
Frequency	: 50Hz, $\pm 5\%$
Communication	: RS485 Communication with MODBUS RTU in external integration with Power Line Communication
Temperature	: Operating Temp. – (-10 to 55) $^{\circ}$ C Storage Temp. – (-20 to 70) $^{\circ}$ C Humidity 5 to 95% RH at 50 $^{\circ}$ C (Non-Condensing)
Dimension	: (96 x 96 x 48) mm (Inclusive of connector)
Panel Cutout	: 92 x 92 mm (-0.5mm)
Mounting	: Panel Mountable
Connector Type	: Screw type terminals (U Lug 2.5mm)
Weight	: 350gms. (app.)